

# **NEW STANDARD EMPTIER**



## Opening And Cleaning




Tools Needed. An Adjustable wrench and channel locks.


Remove The Nut. Be Careful To Not Damage The Wires.



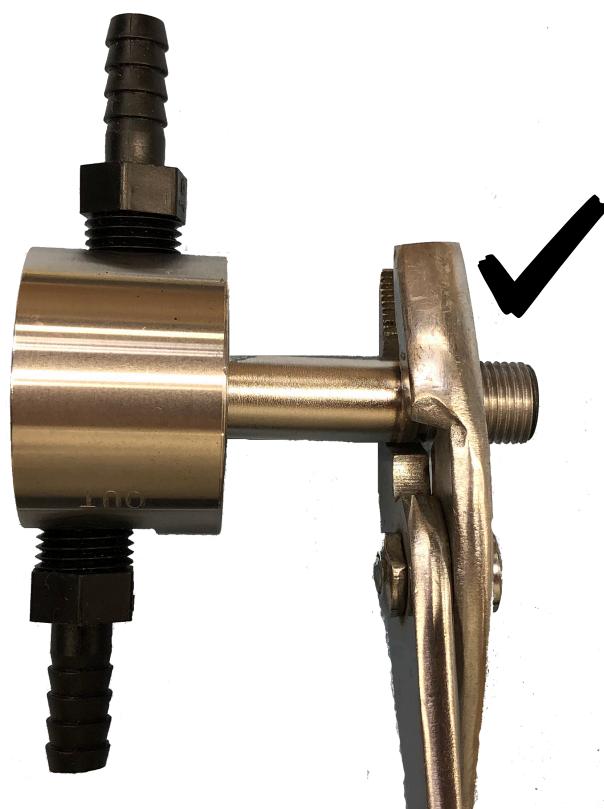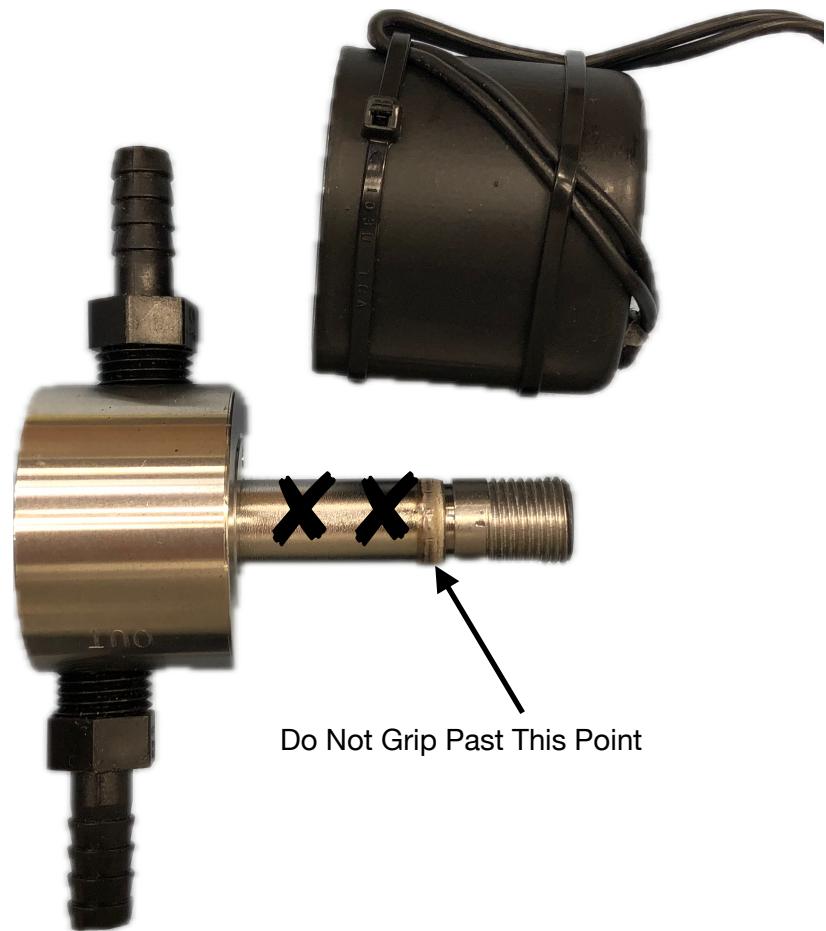

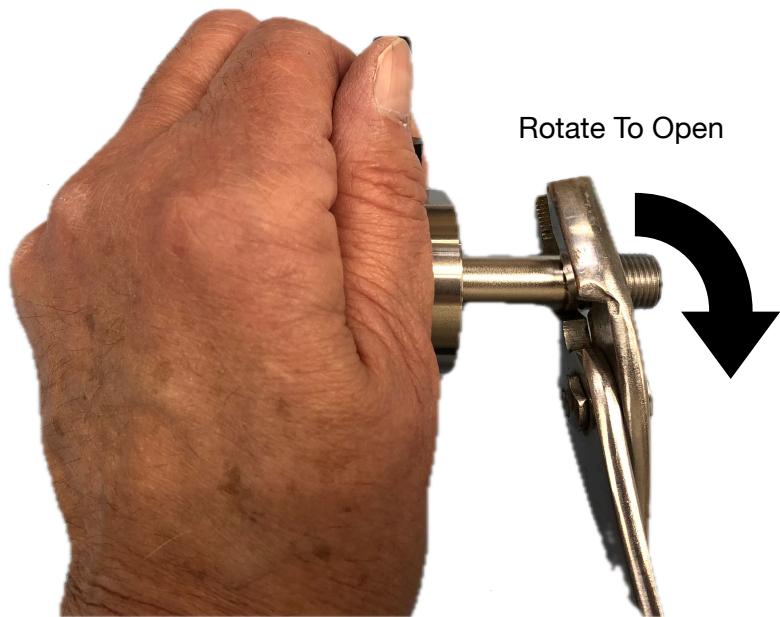


Rotate To Open

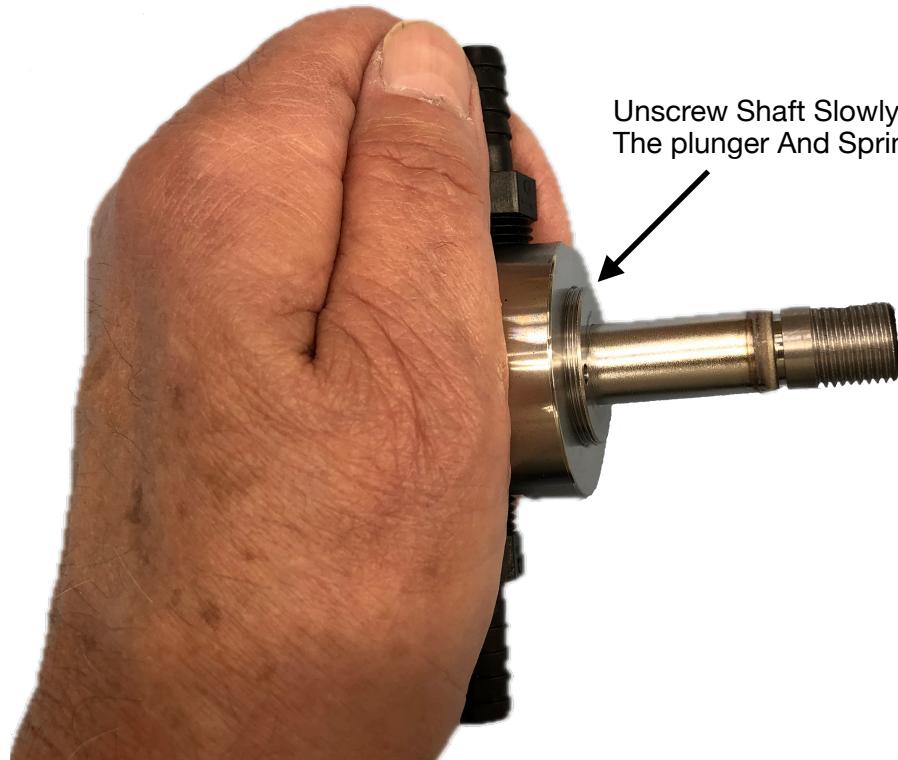

Unscrew Shaft Slowly. Do Not Drop  
The plunger And Spring.

Take Care To Not Damage The “O” Ring.  
Or The Emptier Will Leak

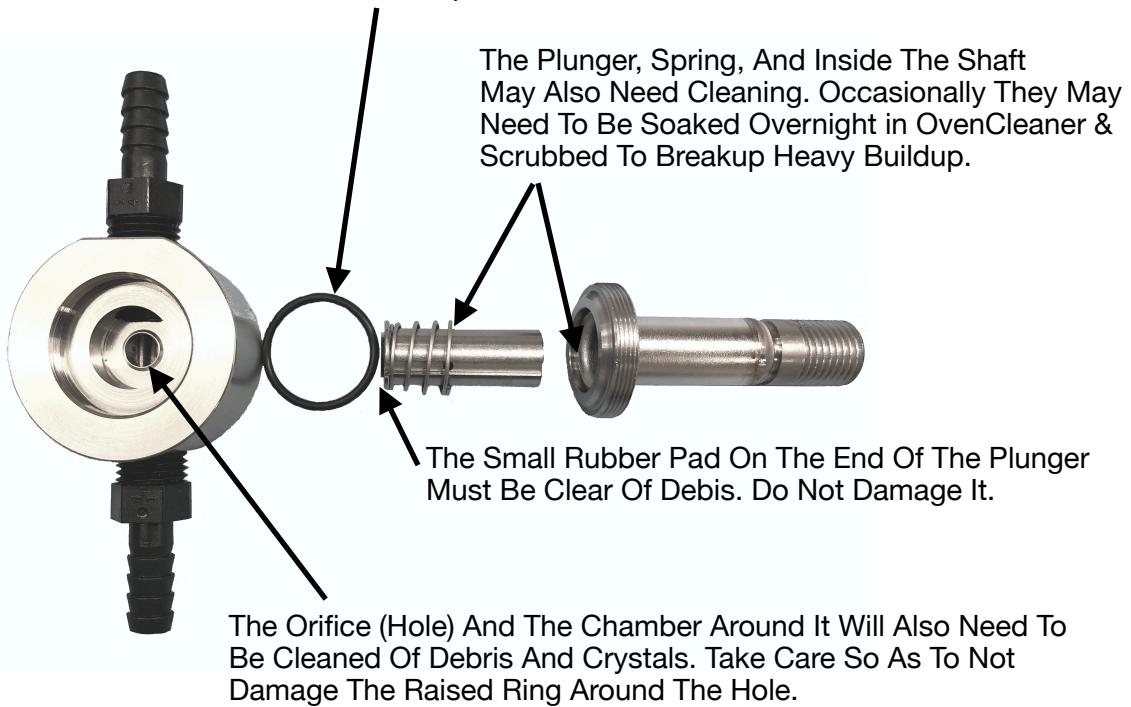

After Cleaning, Carefully Reseat The “O” Ring As  
Shown. Insert The Plunger And Spring Into The Shaft.



Reassemble In The Reverse Order And  
Tighten As Shown Below.

**DO NOT USE EXTREME FORCE.**





Align The Coil And Barbed Fitting  
Vertically So The "IN" Is At The Top  
Before Tightening The Nut.

